

# Video to Digital Converter

## 1) Turn on the ClearClick Video to Digital converter:

- Use the button on the upper right.





## 2) Plug your flash drive into the back of the converter:



## 3) Turn on Toshiba VHS/DVD converter:

- The video to digital converter is connected to the Toshiba VHS to DVD converter.
- Power on with the **ON** button on the left side of the machine.
- Turn on the VHS/DVD monitor with the button on the lower right under the screen.

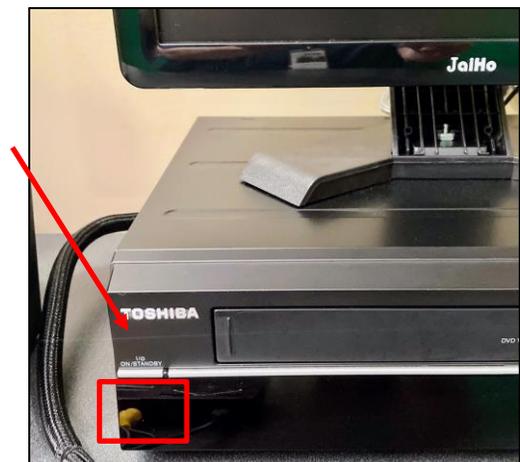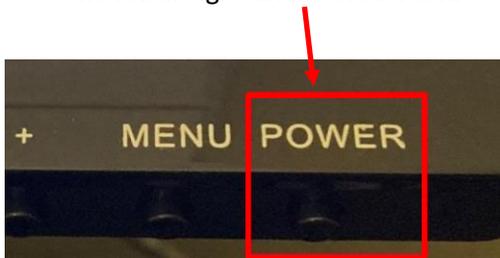

4) Record your video onto your flash drive (VHS or DVD):

**VHS to Digital**

- You will need to make sure you are in VCR mode. Use the remote and press the orange button (see right).
- Insert your VHS tape and then press play.
- (You may want to start playing the VHS tape and then pausing prior to the point in which you wish to record).



**DVD to Digital**

- If you wish to copy a DVD into a digital format, you will want to select the green button instead (see right).
- Put in the DVD and wait a few moments for it to load.
- Use the remote to start playing the DVD.



- Your video will appear on the screen of the Video to Digital converter.



- To begin recording press the **Rec/Stop** button on the right.
- In the upper left of the Video to Digital converter a timer will start right next to the red recording icon.
- If you wish to adjust the volume on the digital converter, use the **Up** and **Down** arrows above and below the **OK**.



5) Complete your recording:

- When you are finished with your recording, press **Rec/Stop** again.
- To turn off the Video to Digital converter, press the power button at the upper right.



 
- This will bring up the screen that reads “Power off notice.” Use the right or left arrow to select “Confirm.” Then click the **OK** button (in the middle).
- Remember to remove your VHS or DVD from the VHS/DVD converter.
- Remove your flash drive.

6) How to locate your recording on your flashdrive:

- To view your recording, plug your flashdrive into one of the computer’s USB ports and then open the **Video** folder. (The Video to Digital converter will add three folders in the flashdrive: LOST.DIR, photo, & video).



- Your video will appear as shown below with a numerical name.



- You can change the name by clicking on the video and then click the **rename** icon above (it has a letter “A”). When the text turns dark blue, you can type your own name over it.

